

GUIDE

Maintenance and cleaning

Manufactured in powder painted steel with smooth surfaces.
Minimal maintenance and easy cleaning.



Lids and surfaces

Always clean your bins using a slightly wrung fiber cloth. Use water and household soap, inside as well as outside. If several waste bins are linked together with magnets, you should regularly check the gap between the bins. In case of small surface scratches, a repair kit is available.

Wheels and feet

Wheels and feet are hidden behind the case and will never touch the waste. Check regularly for dust accumulation in the wheels. This is easily removed; flip the bin onto the side and clean the wheels using a wrung cloth. Use benzene if a wrung cloth is insufficient.



Bag holders

Always clean your bins using a slightly wrung fiber cloth. Use water and household soap. Check annually if the two mounting screws are tight. Bag holders and screws are easily replaced if broken.

Gas spring, lid, and foot pedal

Gas springs and their brackets are mounted in such a way that very little dust will accumulate. Always clean your bins using a slightly wrung fiber cloth. Use water and household soap. The opening mechanism on pedal bins are fitted on nylon bearings that do not require lubrication or other forms of maintenance.



NOTE: Do not use sponges, scouring powders, and solvent and acidic cleaning agents for cleaning.